




Spare Parts

LKBV Airblow Valve

Airblow Valve Type LKBV

2

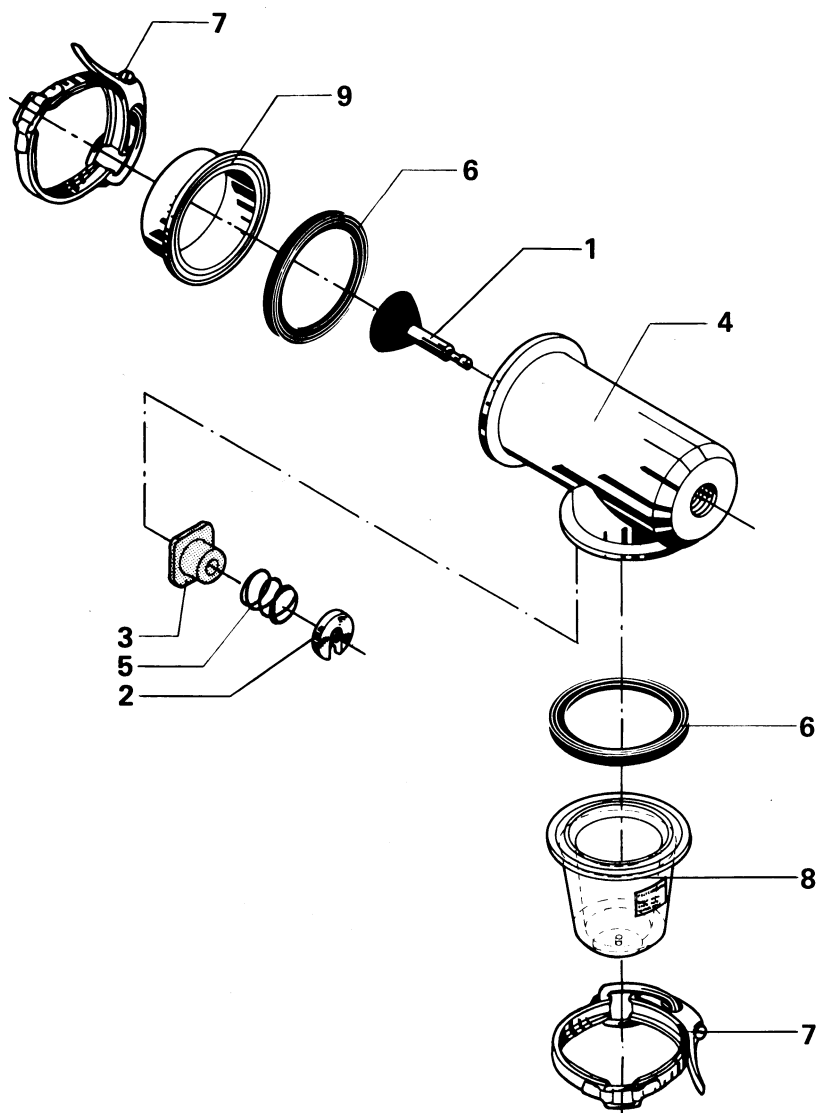

Airblow Valve Type LKBV

AISI 304

Pos.	Qty.	Denomination	9611-25-0117
1Δ	1	Plug	9611-25-2202
2	1	Locking washer	9611-25-2204
3Δ	1	Plug guide	9611-25-2203
4	1	Valve body	9611-25-2194
5Δ	1	Spring.....	9611-99-0443
6Δ	2	Seal (NBR)	9611-99-0767
7	2	Clamp ring	9611-99-1032
8	1	Sight glass	9611-25-2205
9	1	Clamp part	9611-31-021-0
Δ		Service kit.....	9611-92-4042

Parts marked with Δ are included in the **service kit**.

How to contact Alfa Laval

Contact details for all countries are continually updated on our website. Please visit www.alfalaval.com to access the information direct.