


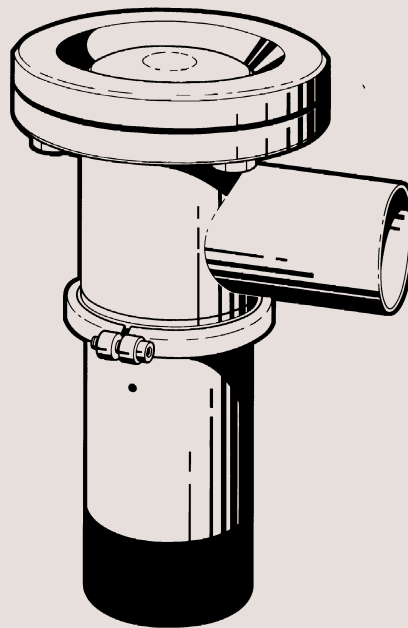

Spare Parts


LKAB Tank Outlet Valve



SP70791-GB2 2002-11

Tank Outlet Valve Type LKAB

2

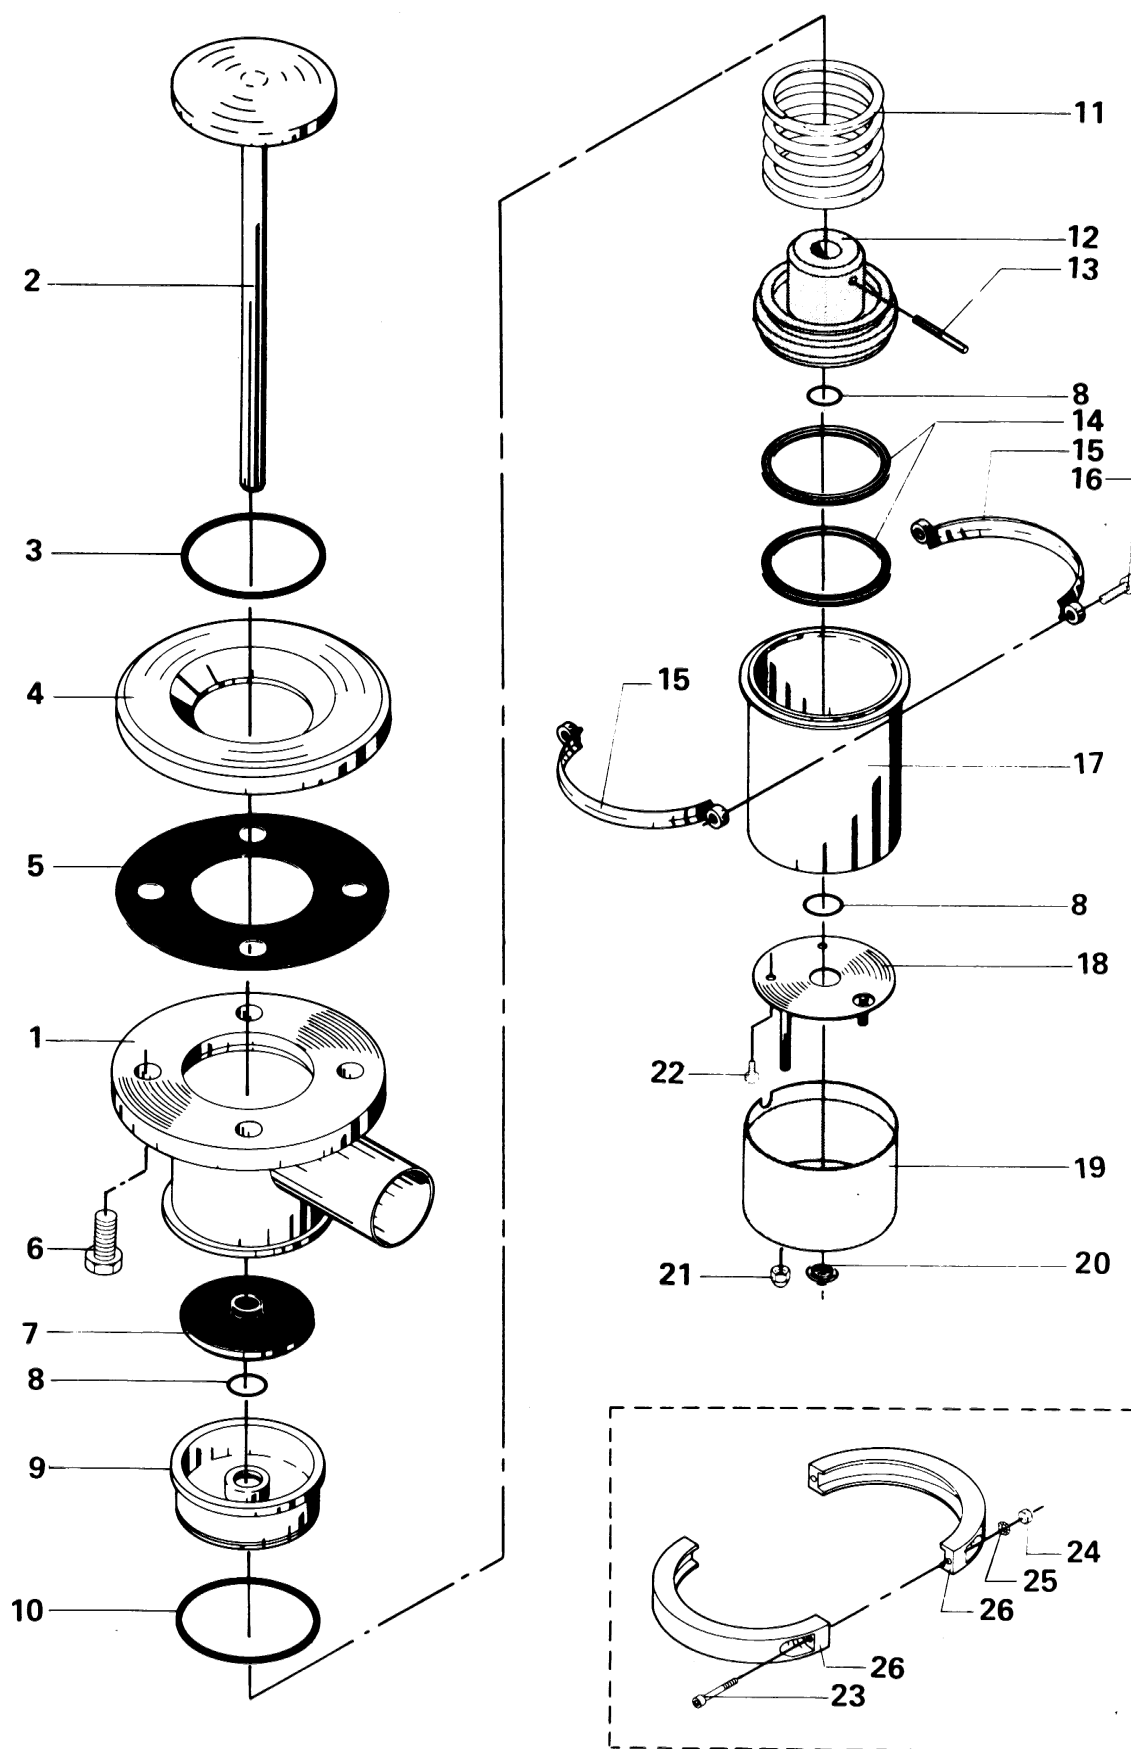

Tank Outlet Valve Type LKAB

AISI 316

Pos.	Qty.	Denomination	9611-43-0911 51 mm	9611-43-0912 63.5 mm	9611-43-0913 76 mm	9611-43-0914 101.6 mm
1	1	Valve house	9611-43-2342	9611-43-2472	9611-43-2324	9611-43-2492
2	1	Valve spindle	9611-43-2591	9611-43-2542	9611-43-2542	9611-43-2588
3Δ	1	O-ring, NBR	9611-99-0093	9611-99-0043	9611-99-0043	9611-99-0031
	1	O-ring, EPDM	9611-99-0543	990051-02	990051-02	9611-99-0395
	1	O-ring, FPM	9611-99-3152	9611-99-1254	9611-99-1254	9611-99-1347
4	1	Mating flange	9611-43-2350	9611-43-2334	9611-43-2334	9611-43-2658
5Δ	1	Seal, NBR	9611-99-0157	9611-99-0158	9611-99-0158	9611-99-0159
	1	Seal, EPDM	9611-99-1212	9611-99-2616	9611-99-2616	9611-99-2617
	1	Seal, FPM	9611-99-2613	9611-99-1287	9611-99-1287	9611-99-2614
6	4	Hexagon screw	9611-99-1216	9611-99-1217	9611-99-1217	9611-99-0356
7Δ	1	Lip seal, NBR (Std.)	9611-40-314-0	9611-40-314-0	9611-40-314-0	9611-40-314-0
	1	Lip seal, EPDM	9611-40-314-1	9611-40-314-1	9611-40-314-1	9611-40-314-1
	1	Lip seal, FPM	9611-40-314-2	9611-40-314-2	9611-40-314-2	9611-40-314-2
8♦	3	O-ring, NBR	9611-99-0049	9611-99-0049	9611-99-0049	9611-99-0049
9	1	Bottom timber	9611-40-2338	9611-40-2338	9611-40-2338	9611-40-2501
10♦	1	O-ring, NBR	9611-99-0021	9611-99-0021	9611-99-0021	9611-99-0044
11	1	Spring	9611-99-0411	9611-99-0411	9611-99-0411	9611-99-0411
12	1	Piston	9611-40-2546	9611-40-2546	9611-40-2546	9611-40-2587
13	1	Pin connex	9611-99-0637	9611-99-0637	9611-99-0637	9611-99-0637
14♦	2	U-packing	9611-99-0126	9611-99-0126	9611-99-0126	
	1	U-packing				9611-99-0108
15	2	Clamp half	9611-40-486-0	9611-40-486-0	9611-40-486-0	
16	2	Allen screw	9611-99-0371	9611-99-0371	9611-99-0371	
17	1	Aircylinder	9611-40-2544	9611-40-2544	9611-40-2544	9611-40-2586
18	1	Plate	9611-40-493-0	9611-40-493-0	9611-40-493-0	9611-40-493-0
19	1	Cap	9611-40-492-0	9611-40-492-0	9611-40-492-0	9611-40-492-0
20	1	Rubber plug	9611-99-1142	9611-99-1142	9611-99-1142	9611-99-1142
21	2	Top nut	9611-99-1143	9611-99-1143	9611-99-1143	9611-99-1143
22	1	Screw	9611-99-0218	9611-99-0218	9611-99-0218	9611-99-0218
23	2	Allen screw				9611-99-0203
24	2	Nut				9611-99-0204
25	2	Washer				9611-99-0756
26	2	Clamp half				9611-40-2660
♦		Service kit actuator	9611-92-4031	9611-92-4031	9611-92-4031	9611-92-4032
Δ		Service kit body parts, NBR	9611-92-4033	9611-92-4034	9611-92-4034	9611-92-4035
Δ		Service kit body parts, EPDM	9611-92-4036	9611-92-4037	9611-92-4037	9611-92-4038
Δ		Service kit body parts, FPM	9611-92-4039	9611-92-4040	9611-92-4040	9611-92-4041

Parts marked with Δ/♦ are included in the **service kit**.
Recommended spare parts: **Service kit**.

How to contact Alfa Laval

Contact details for all countries are continually updated on our website. Please visit www.alfalaval.com to access the information direct.