



Instruction Manual

Gunclean Toftejorg TZ-75 Portable

IM-TE91A251-EN1
October 2005

Contents

Contents	1
Introduction.....	3
General Description.....	4
Functioning	4
Standard configurations	5
Options	5
Technical Data.....	6
Installation and Normal Operation.....	8
General Installation Instructions.....	8
Normal Operation.....	9
Maintenance and repair.....	10
Preventive Maintenance Guidelines and Service Kits	10
Maintenance intervals and Service Kits selection	10
Top Assembly	12
Bottom Assembly	14
Hub Subassembly.....	16
Stem Subassembly	18
Gear Subassembly	20
Replacement of Collar Bushes.....	22
Replacement of Ball races	24
Replacement of Main Collars	26
Tools	28
Standard Tool kit for Gunclean Toftejorg TZ-75, Article No. TE81B065	28
Sketch of tool for replacement of Main collars	29
Trouble Shooting Guide	30
Reference List of Parts.....	32
Cross Sectional Drawing.....	33
Service Kits.....	34
TE55M000 Minor Service Kit TZ-75FIX/TZ-75PT/TZ-750FIX	34
TE55M010 Major Service Kit TZ-75FIX/TZ-75PT/TZ-750FIX	34
How to order spare parts and claim procedure	35
How to contact Alfa Laval Tank Equipment A/S.....	35
Service Card.....	36
Claim Report Working Conditions	37

Introduction

This manual has been prepared as a guide for the persons who will be operating and maintaining your tank cleaning machine. The key to long life for your tank cleaning machine will always be a system of carefully planned maintenance; you will appreciate that a tank cleaning machine which has a rough and dirty job to do will need more frequent attention than one working in ideal conditions.

It is in your own interest to get the best and most economical performance from your tank cleaning machine. Neglect of maintenance means poor performance, unscheduled stoppages, shorter life and expense. Good maintenance means good performance; no unscheduled stoppages and better total economy.

You will find the information contained in this manual simple to follow, but should you require further assistance, our Customer Service Department and worldwide net of Distributors will be pleased to help you. Please quote the type and serial number with all your enquiries; this will help us to help you. The type and serial number are placed on the gear house of the tank cleaning machine.

Note: The illustrations and specifications contained in this manual were effective at the date of printing. However, as continuous improvements are our policy, we reserve the right to alter or modify any unit specification on any product without prior notice or any obligation.


General Description

The Gunclean Toftejorg TZ-75 is a media driven and media lubricated tank cleaning machine. As it is self-lubricating, there is no lubricating substance such as oil, grease etc. in the machine which needs to be regularly changed.

Functioning

The flow of the cleaning fluid into the machine passes through a guide and a turbine, which is set into rotation. The turbine rotation is through a gearbox transformed into a combined horizontal rotation of the machine body and a vertical rotation of the nozzles.

The combined motion of the machine body and the nozzles ensures a fully indexed tank cleaning coverage. After $11\frac{1}{4}$ revolutions of Hub with nozzles ($10\frac{3}{4}$ revolutions of the machine body), one coarse cleaning pattern is laid out on the tank surface. During the following rounds, this pattern is repeated 3 times, each of which is displaced $\frac{1}{4}$ of the mesh in the pattern. After a total of 45 revolutions of the Hub with nozzles (43 revolutions of the machine body), a complete cleaning pattern has been laid out, and the first pattern is repeated.

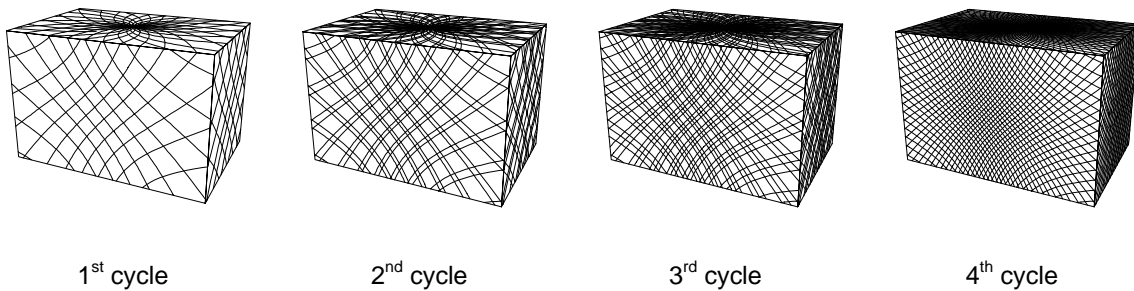

The speed of rotation turbine depends on the flow rate through the machine. The higher the flow rate is, the higher the speed of rotation will be. In order to control the RPM of the machine for a wide range of flow rates, the efficiency of the turbine can be changed (100% and 0% Turbine/Inlet guide).

Apart from the jet flow through the nozzles, fluid is leaking through the top of the machine, at the hub and through the bottom cover. The leakages between the moving parts at the top and at the hub are cleaning the gabs and thus preventing build-up of material that might cause extra friction. The flow through the bottom cover is due to the fact that the machine is media lubricated, and that accordingly a flow through the gearbox is needed.

General description (continued)

Standard configurations

The machine is equipped with a clutch in the hub, which gives the possibility of rotation by hand the nozzles, when the machine is to be lifted out through a tank opening.

Connection	Turbine/Inlet Guide	Nozzles (mm) (1" thread conn.)	Article/Ref. No.
<u>Nipple:</u>	100%	2 x ϕ 11	TE22B212
		2 x ϕ 12	TE22B214
2½" ASA, Male d _i : ϕ 55mm	0%	2 x ϕ 12	TE22B228
		2 x ϕ 13	TE22B230
		2 x ϕ 14	TE22B232
		2 x ϕ 15	TE22B234

Connection	Turbine/Inlet Guide	Nozzles (mm) (1" thread conn.)	Article/Ref. No.
<u>Nipple:</u>	100%	2x ϕ 11	TE22B162
		2x ϕ 12	TE22B164
2" BSP	0 %	2x ϕ 12	TE22B168
		2x ϕ 13	TE22B180
		2x ϕ 14	TE22B138
		2x ϕ 15	TE22B184

Connection	Turbine/Inlet Guide	Nozzles (mm) (1" thread conn.)	Article/Ref. No.
<u>Nipple:</u>	100%	2x ϕ 11	TE22B112
		2x ϕ 12	TE22B114
2" NPT	0 %	2x ϕ 12	TE22B128
		2x ϕ 13	TE22B130
		2x ϕ 14	TE22B132
		2x ϕ 15	TE22B134

Options

Machines with Nozzle extensions for longer throw length can be supplied as an option. Same article no. with index no. -22, e.g. TE22B062-22.


Machines with Nozzle extensions and E-gear: Same article no. with index no. -62, e.g. TE22B062-62.

Gunclean Toftejorg TZ-75 machines with PEEK wear parts: TE22Bxxx-06.




Technical Data

Weight of machine	:	13 kgs (28.6 lb)
Working pressure	:	2-12 bar (30-175 psi)
Recommended inlet pressure	:	5-10 bar (75-150 psi)
Working temperature max.	:	95° (200° F)
Materials	:	Stainless steel, polymer, carbon

Principal dimensions in mm

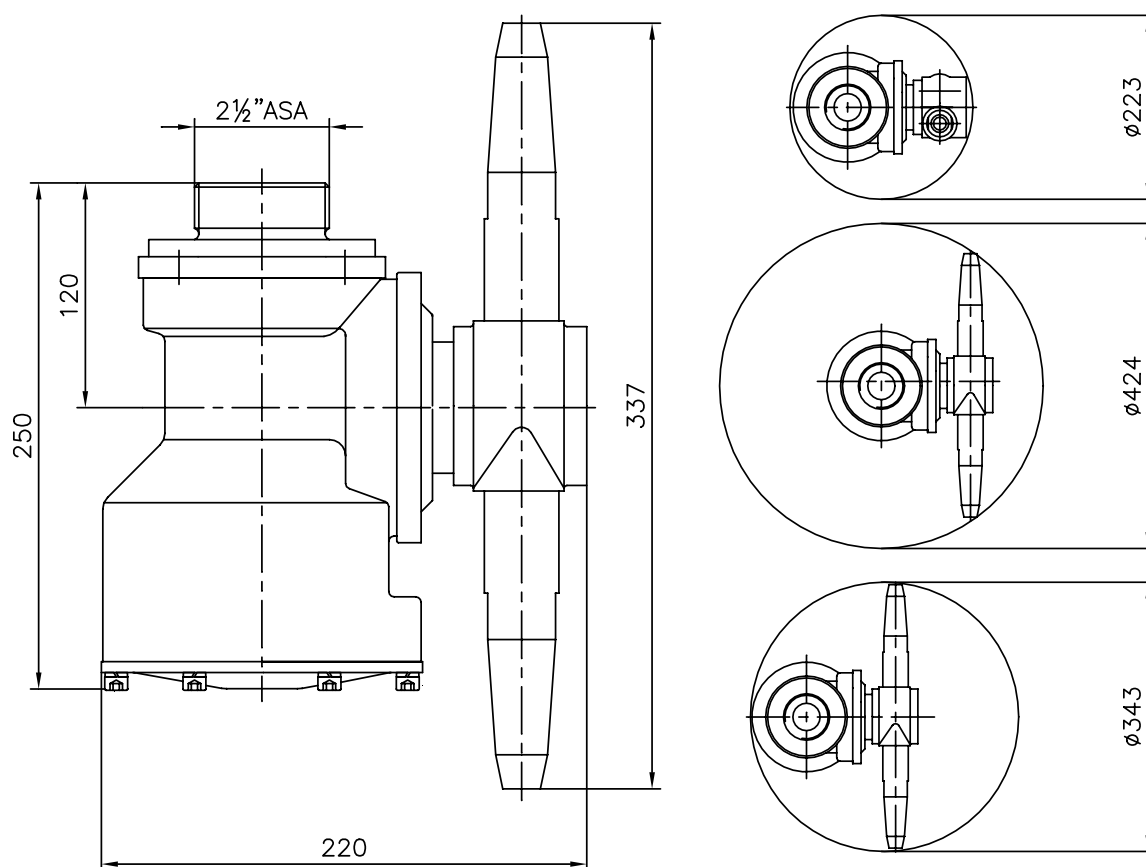

Technical data (Continued)

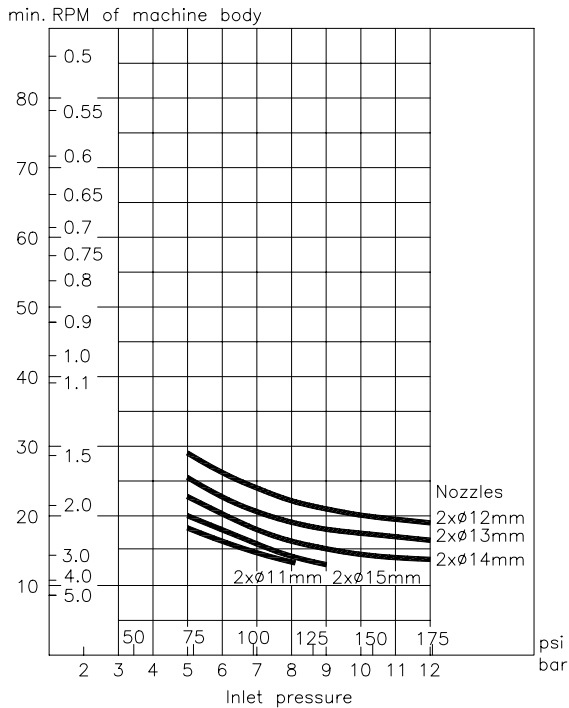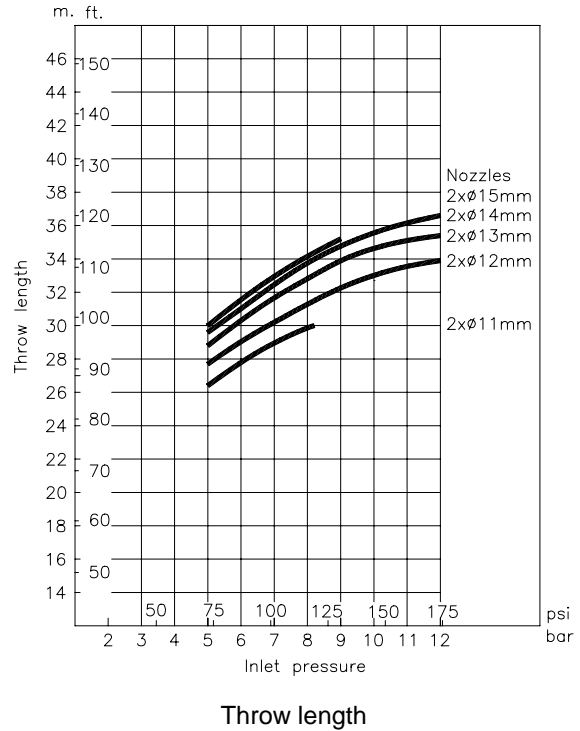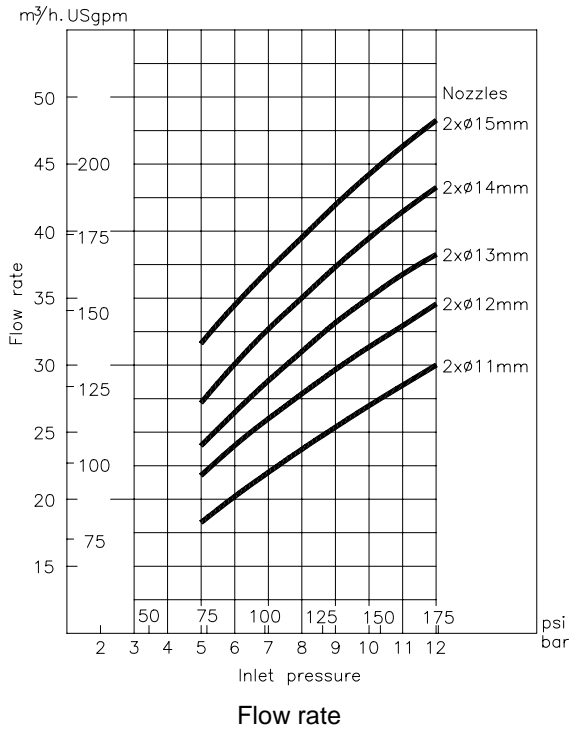

Cleaning Time f. complete Pattern (= 4 cycles)

Note: Throw lengths are measured as max. horizontal throw length at static condition. Vertical throw length upwards is approx. 1/3 less.

Effective throw length varies depending on jet transverse speed over surface, substance to be removed, cleaning procedure and agent.

The inlet pressure has been taken immediately before the machine inlet. In order to achieve the performance indicated in the curves, the pressure drop in the supply lines between pump and machine must be taken into consideration.

Option: The Gunclean Toftejorg TZ-75 Portable can be supplied with nozzle extensions and E-gearing for longer throw length. Curves for flow rate and throw length are currently not updated accordingly.

Installation and Normal Operation

General Installation Instructions

The tank cleaning machine should be installed in vertical position (upright or upside down). It is recommended to install a filter in the supply line in order to avoid large particles to clog inside the machine. Before connecting the machine into the system, all supply lines and valves should be flushed to remove foreign matter.

Warning:



If the machine is used in potential explosive atmospheres, tapes or joint sealing compounds which are electrical insulators must not be used on threads or joints, unless an electrical connection is otherwise established to ensure an effective earthing. In addition, connecting pipe work, must be electrically conductive and earthed to the tank structure. The resistance between the nozzles and the tank structure should not exceed 20,000 Ohm. This is essential to avoid the build-up of static electricity on the machine.

For further information see CENELEC R044-001 Safety of Machinery, guidance and recommendations for the avoidance of hazards due to static electricity.

Note: The machine shall be installed in accordance with national regulations for safety and other relevant regulations and standards.

Precautions shall be made to prevent starting of the cleaning operation, while personnel are inside the tank or otherwise can be hit by jets from the nozzles.

In EU-countries the complete system must fulfil the EU-machine directive and shall be CE-marked.

To protect your tank coating it is recommended to mount bumpers on the tank cleaning machine.

The machine as delivered has been tested at the factory before shipping. For transportation reasons, the nozzles have been screwed off after the test. All you will have to do to make the machine ready for use is to refit the nozzles and tighten with wrench. Secure with Loctite No. 243 or equivalent.

Check that the machine is in operating condition by inserting 3/16" hex Screwdriver (tool No. TE134A) in screw in top of Turbine shaft and easily turn Turbine shaft clockwise. If any resistance is recognized, the machine should be disassembled to localize the cause.

Installation and Normal Operation (continued)

Normal Operation

Cargo and Cleaning Media

Use only media compatible with stainless steel, polymer and carbon. Normal detergent, moderate solutions of acids and alkalis will be acceptable. Aggressive chemicals, excessive concentrations of chemicals at elevated temperatures, as well as certain solvents and hypochlorites should be avoided. If you are in doubt, contact the local Alfa Laval Tank Equipment distributor.

After Use Cleaning

After use flush the machine with fresh water. Cleaning solutions should never be allowed to dry or set-up in the system due to possible "salting out" or "scaling" of the cleaning ingredient. If cleaning media contains volatile chloride solvents, it is recommended not to flush with water after use, in case this can create hydrochloric acid.

Pressure

Avoid Hydraulic shocks. Put on pressure gradually. Do not exceed 12 bar inlet pressure. Recommended inlet pressure appears from Technical Data (page 6-7). High pressure in combination with high flow rate will increase consumption of wear parts.

Maintenance and repair

Preventive Maintenance Guidelines and Service Kits

By using Alfa Laval Tank Equipment Preventive Maintenance Guidelines and Service Kits you are enabled to ensure the availability of your equipment at all times. You are able to plan your operating budget and your downtime. The risk of breakdowns due to component failure is virtually eliminated and in the long term your operating costs are reduced.

Alfa Laval Tank Cleaning Equipment Service Kits contain All you need. They comprise genuine Alfa Laval spare parts, manufactured to the original specifications.

Maintenance intervals and Service Kits selection

Alfa Laval Service Kits for Tank Cleaning Machine type, TZ-75PT is available in two levels: Minor Service and Major Service.

Minor Service Kit is recommended to be replaced every 250 working hours or 2½ years, whichever comes first.

TE55M000 Minor Service Kit contains:

Pos.	Qty x P/n	Description
6	1 x TE609P	Main bush
12	3 x TE615K	Collar bush
13	1 x TE22A360	Worm wheel
14	1 x TE22A360	Worm heel
19	4 x TE651	Locking wire
30	2 x TE929K	Slide bearing

Major Service kit is recommended to be replaced every 1000 working hours or 10 years, whichever comes first.

TE55M010 Major Service Kit contains:

Pos.	Qty x P/n	Description
7	1 x TE911K	Turbine shaft
8.1	1 x TE126-1	Ball race
20.1	1 x TE126-1	Ball race
21.1	1 x TE126-1	Ball race
28.3	1 x TE126-1	Ball race
23.1	1 X TE624-11	Hub liner
24	1 x TE448	Cotter pin
27	2 x TE126S	Ball retainer with balls
28.1	1 x TE127Z1	Main collar, upper
28.2	1 x TE127Z2	Main collar, lower
28.4	1 x TE127-3	Collar, hub
29	1 x TE128Z	Horizontal shaft
	1 x TE55M000	Service Kit Minor, TZ-75FIX/ TZ-75PT/TZ-750FIX

Maintenance and repair (continued)

All Major Service kits includes the corresponding Minor Service Kits parts. Each kit contains a maintenance guide.

The following recommended preventive maintenance programme is based on tank cleaning machines working in average conditions. However, you will appreciate that a tank cleaning machine, which has a rough and dirty job to do, will need more frequent attention than one working in ideal conditions. We trust that you will adjust your maintenance programme to suit.

General recommendations

- Always read the instruction and maintenance manuals before undertaking the service.
- Some kit contains a small quantity of parts not needed for each tank cleaning machine model. These are not included in the price and may be disregarded.
- Always replace all parts included in the Service Kit.

Additional maintenance recommendations

Good maintenance is careful and regular attention!

Always use only proper tools. Use standard tool kit. Never force, hammer or pry components together or apart. Always perform all assembly/disassembly steps in the order described in this manual.

Never assemble components without previous cleaning. This is especially important at all mating surfaces. Work in a clear well lighted work area.

Disassemble machine as described on the following pages.

1. Disassemble machine as described on the following pages.
2. Clean material build-up and deposits from internal parts with Scotchbrite, S-Ultrafine, eventually chemical cleaner and fine abrasive cloth.
3. Assemble machines as described in the following pages.
4. Check that the machine is in operating condition by inserting 3/16" hex Screw-driver (tool No. TE134A) in screw in top of Turbine shaft and easily turn Turbine shaft clockwise. If any resistance is recognized, the machine should be disassembled to localize the cause.

Service Card

For your registration of maintenance carried out, fill in service card which you will find at the back of this manual, see page 36.

Maintenance and repair (continued)

Top Assembly

Disassembly


1. Remove Screws (pos. 10). Loosen with Key (tool No. TE135) and unscrew with Screwdriver (tool No. TE135A).
2. Lift off Nipple (pos. 1).
3. Remove Guide/Guide ring (pos. 2). The Guide has a groove in the outer diameter. The Guide is easily lifted out of the Stem by means of two ordinary Screwdrivers inserted into the groove.
4. Remove Screw (pos. 17), Spring washer (pos. 16) and Washer (pos. 18). To secure Impeller against rotation, insert carefully Screwdriver (tool no. TE135A), through Impeller (pos. 4) into a hole in the Stem.
5. Pull off Impeller (pos. 4).

Reassembly

1. Reinstall Impeller (pos. 4). Make sure that Impeller is correctly rotated to be pushed onto Turbine shaft. Do not try to hammer Impeller in position, as this damages Slide bearing under Turbine shaft.
2. Mount Washer (pos. 18), Spring washer (pos. 16) and Screw (pos. 17) and tighten. To secure Impeller against rotation insert carefully Screwdriver (tool no. TE135A) through Impeller (pos. 4) into a hole in the Stem.
3. Reinstall Guide/Guide ring (pos. 2).
4. Mount Nipple (pos. 1). Make sure that it is in correct position over Guide/Guide ring (pos. 2). Rotate Nipple to align holes in Flange and Stem.
5. Mount Screws (pos. 10) with Screwdriver (tool no. TE135A) and Key (tool no. TE135).

Maintenance and repair (continued)

Top Assembly

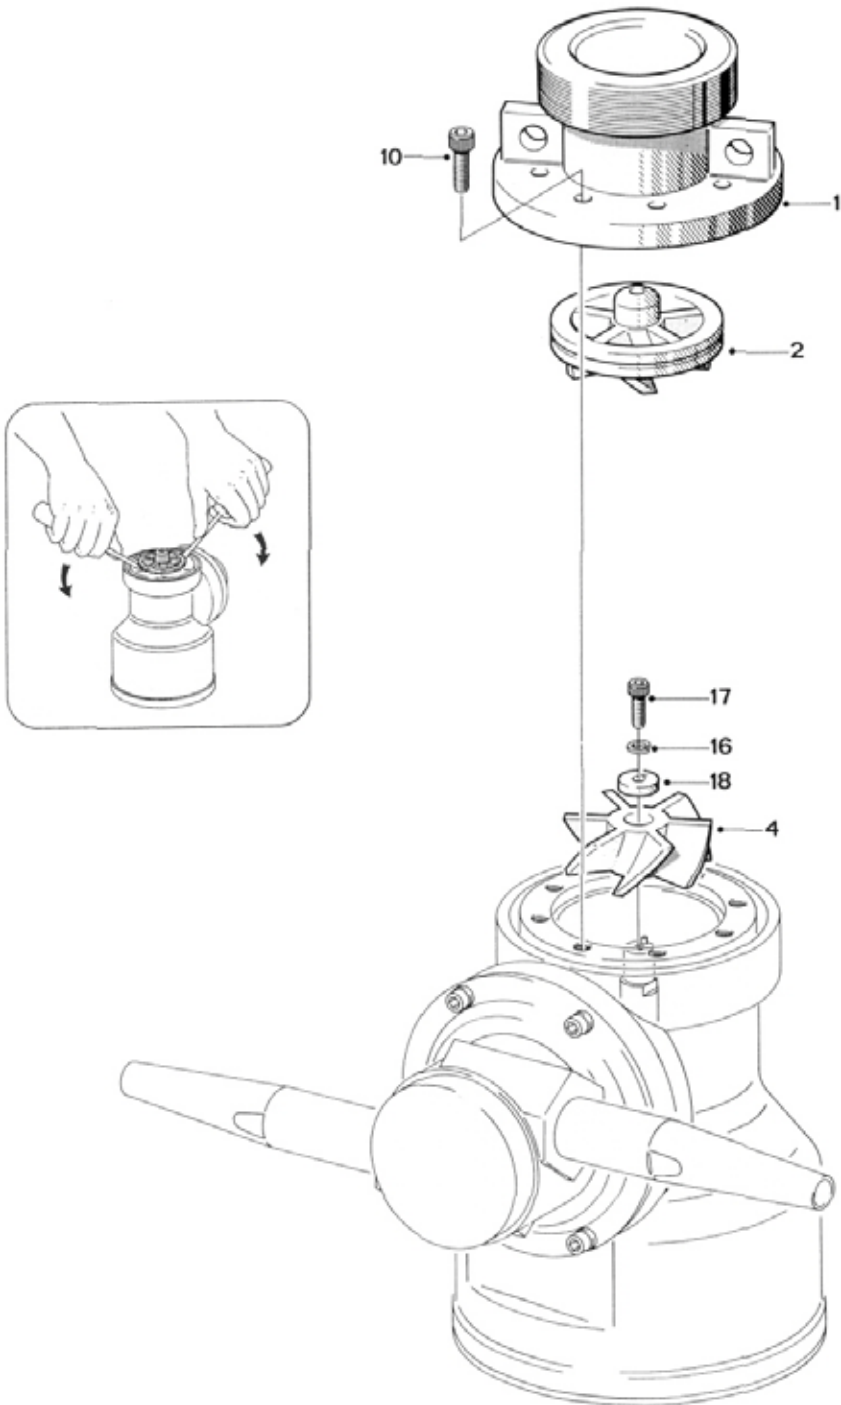

Maintenance and repair (continued)

Bottom Assembly

Disassembly

1. Turn machine upside down.
2. Remove Screws (pos. 17) and Spring washer (pos. 16) from Bottom cover (pos. 33).
3. Remove Bottom cover (pos. 33).
4. Remove Screws (pos. 17) and Spring washers (pos. 16) along the circumference of Gear frame (pos. 31). Draw out Gear Subassembly (holes in Gear frame are excellent for holding Gear Subassembly).

Reassembly


1. Reinsert Gear subassembly in bottom of machine body. Mount Spring washers (pos. 16) and Screws (pos. 17) along circumference of Gear frame (pos. 31). Tighten screws crosswise.

Note: Turbine shaft is inserted carefully through Gear wheel and Stem. Note also to secure meshing between Gear wheel (pos. 8) and Pinion (pos. 11), it might be necessary to rotate slightly either the whole Gear Subassembly or the Gear wheel.

2. Place Bottom cover (pos. 33).
3. Mount Spring washers (pos. 16) and Screws (pos. 17) and tighten crosswise.

Maintenance and repair (continued)

Bottom Assembly

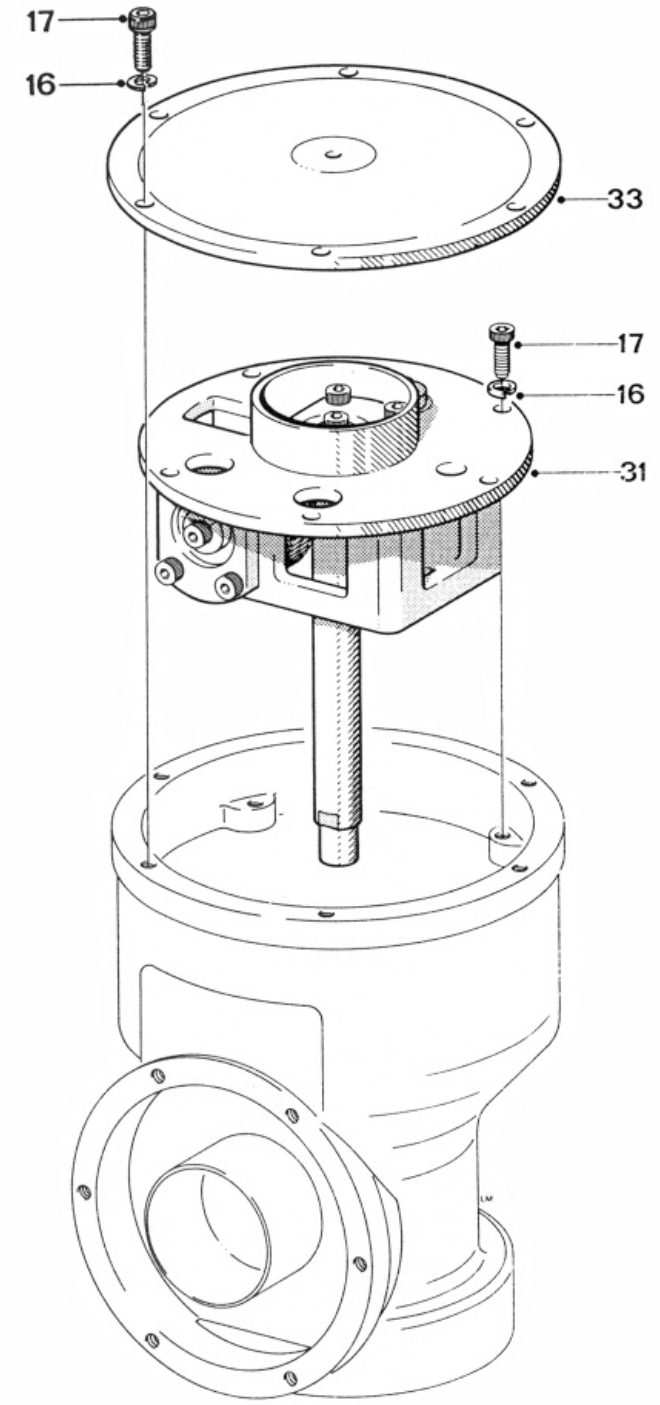

Maintenance and repair (continued)

Hub Subassembly

Disassembly

1. Remove Nozzles (pos. 22). Nozzles are untightened with a wrench on the faces of the nozzles.
2. Remove Screws (pos. 17) and Spring washers (pos. 16) from Hub cover (pos. 21).
3. Draw out Hub Subassembly. If Hub cover (pos. 21) clings into Body, knock carefully with plastic hammer on outer diameter to loosen.
4. Remove Cotter pin (pos. 24). Unscrew contra clockwise Hub conical part (pos. 23) freeing Hub cover (pos. 21), Ball retainer w. balls (pos. 27) and Bevel gear (pos. 20). To unscrew Hub conical part (pos. 23), Hub nozzle part (pos. 25) is held in a vice. Caliper (tool no. TE369) is used for the unscrewing using the two holes in end face of Hub conical part.

Note: Left-hand thread

If Ball races (pos. 26) in Hub cover and in Bevel gear are extremely worn, they should be replaced as well as the Ball retainer with balls (pos. 27). How to replace Ball races see page 24.


If blue teflonliner inside Hub is extremely worn, it can be replaced. This part requires that a precise procedure be followed to accomplish installation. It is suggested that an authorized Alfa Laval Tank Equipment Service Center perform the replacement when necessary. However, should the customer insist that they perform the installation, please contact your nearest Service Center for a copy of the procedure.

Reassembly

1. Mount Bevel gear (pos. 20), Ball retainer with balls (pos. 27) and Hub cover (pos. 21) on Hub conical part (pos. 23). Screw on Hub nozzle part (pos. 25). Note: Left-handed thread. To tighten, place Hub nozzle part in a vice and use Caliper (tool No. TE369). Tighten until holes are aligned to pass Cotter pin (pos. 24). Insert Cotter pin and split (preferably new cotter pin).
2. Slide on Hub Subassembly, fit Hub cover (pos. 21) into Body and mount Spring washers (pos. 16) and Screws (pos. 17).
3. Screw on Nozzles (pos. 22) and tighten with wrench. If desired secure with Loctite No. 243 or equivalent.

Maintenance and repair (continued)

Hub Subassembly

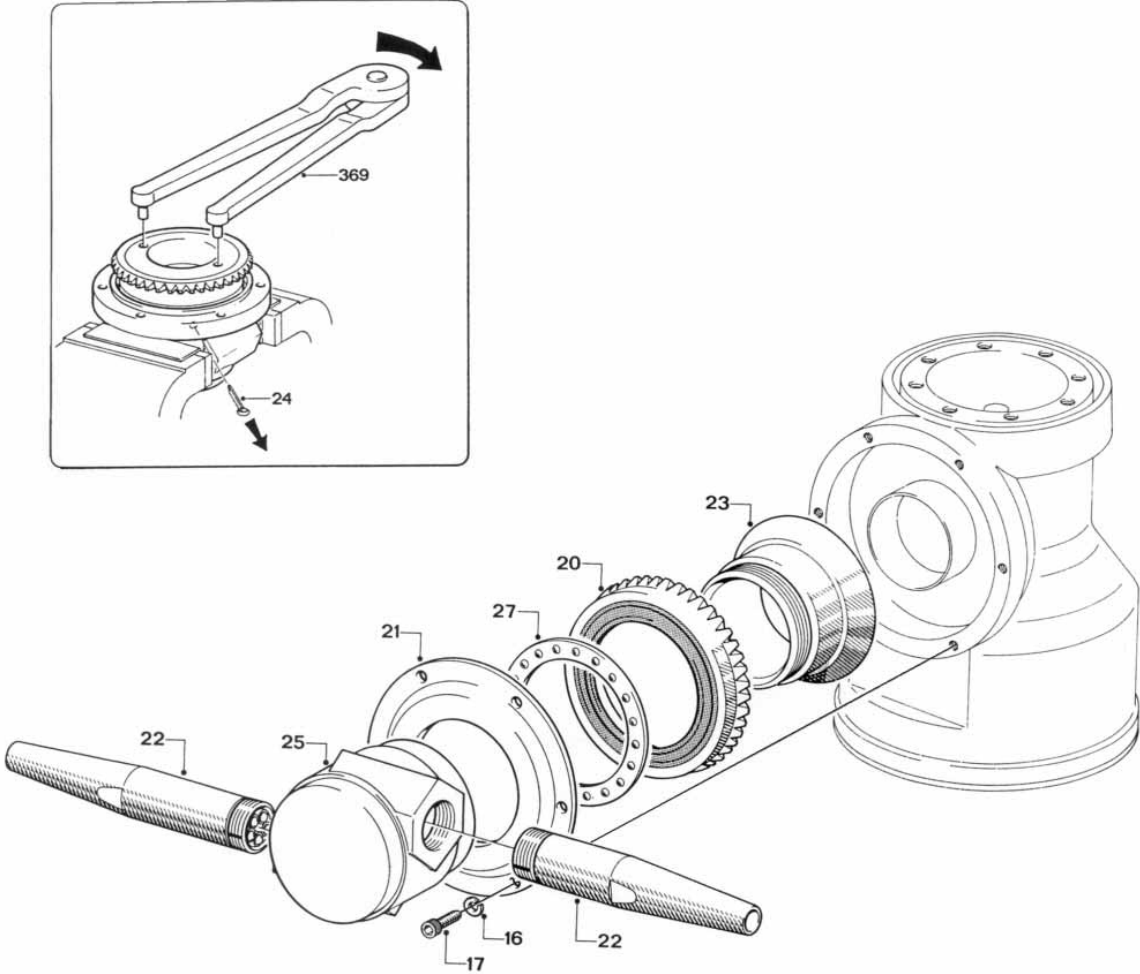

Maintenance and repair (continued)

Stem Subassembly

Disassembly

1. Place machine in upside-down position.
2. Unscrew Gland (pos. 5). Note: Lefthand thread. Push out Main bush (pos. 6).
3. Turn machine upside down.
4. Remove Screws (pos. 10) in Gear wheel (pos. 8). To prevent rotation of Stem (pos. 3) mount two 1/4" screws in two holes opposite one another in BIG end of Stem. Place Stem in a vice held by the heads of the two screws.
5. Draw out Gear wheel with Ball race (pos. 8) and Ball retainer with balls (pos. 27).
6. Push out Stem (pos. 3).

If Ball races in Body (pos. 28.3) and on Gear wheel (pos. 8.1) are extremely worn they should be replaced together with Ball retainer with balls (pos. 27). How to replace Ball races see page. 24.

If blue liners on Stem are extremely worn, they can be replaced. This part requires that a precise procedure be followed to accomplish installation. It is suggested that an authorized Alfa Laval Tank Equipment Service Center perform the replacement when necessary. However, should the customer insist that they perform the installation, please contact your nearest Service Center for a copy of the procedure.


Reassembly

1. Push Stem (pos. 3) into Body. Turn machine upside-down.
2. Place Ball retainer with balls (pos. 27) and Gear wheel (pos. 8) into Body on Ball race. Rotate gearwheel to check free rotation.
3. Mount gear wheel (pos. 8) with 1/4" Screws and tighten crosswise.
4. Turn machine to upright position. Remount Main bush (pos. 6) in Gland (pos. 5) and screw into Stem (pos. 3).

Note: Left-hand thread.

Maintenance and repair (continued)

Stem Subassembly

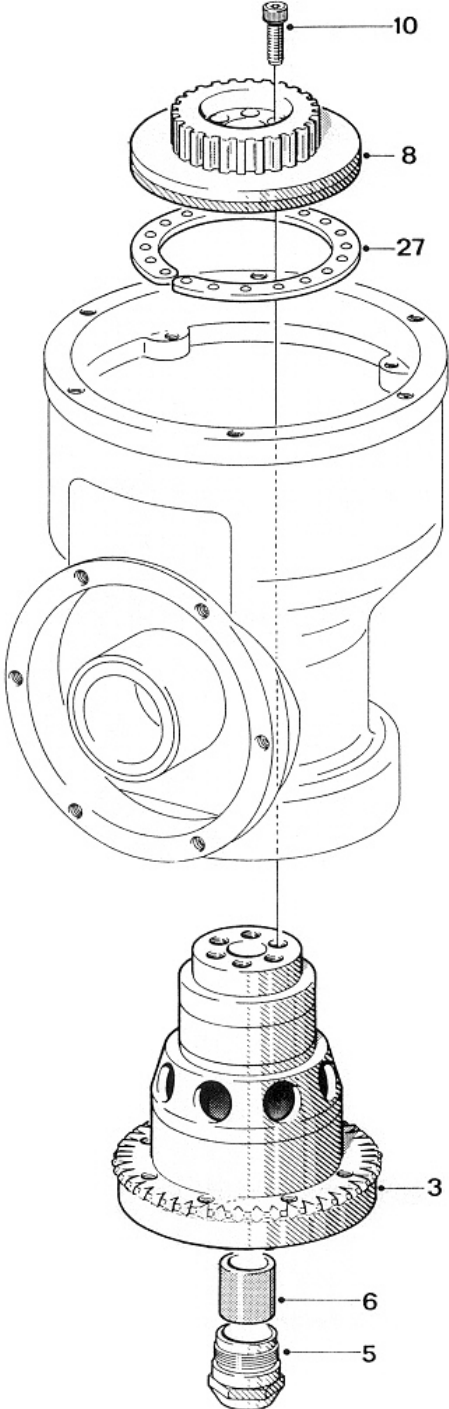

Maintenance and repair (continued)

Gear Subassembly

Disassembly

1. Hold Turbine shaft (pos. 7) against 1st stage Worm wheel (pos. 14) with one hand and loosen Screws (pos. 17) in Pinion (pos. 11) and Horizontal shaft (pos. 29) with the other hand.
2. Draw out Turbine shaft (pos. 7) after Screw (pos. 17), Spring washer (pos. 16) and Washer (pos. 18) has been removed. Use faces on Turbine shaft to hold against rotation.

Warning: Do not damage driver faces on Turbine shaft. Use only proper tools providing a firm grip such as a wrench or a vice.



3. Draw out Horizontal shaft (pos. 29) and 1st stage Worm wheel (pos. 14) after removal of Screw (pos. 17), Spring washer (pos. 16) and Washer (pos. 18).
4. Draw out Pinion (pos. 11) and 2nd stage Worm wheel (pos. 13), also freeing Journal (pos. 15) after removal of Screw (pos. 17), Spring washer (pos. 16) and Washer (pos. 18).
5. Remove Bearing covers (pos. 32) and Slide bearing (pos. 30), after removal of Screws (pos. 17).


How to replace Collar bushes (pos. 12), see page 22.

Reassembly

1. Push Slide bearings (pos. 30) into Gear frame (pos. 31) and fix Bearing covers (pos. 32) with Screws (pos. 17). Tighten crosswise.
2. Insert 2nd stage Worm wheel (pos. 13), Pinion (pos. 11) and Journal (pos. 15). Mount Washer (pos. 18), Spring washer (pos. 16) and fix with Screw (pos. 17). Check rotation.
3. Insert 1st stage Worm Wheel (pos. 14) and Horizontal shaft (pos. 29). Mount Washer (pos. 18), Spring washer (pos. 16) and fix with Screw (pos. 17). Check rotation.
4. Insert turbine shaft (pos. 7). Mount Washer (pos. 18), Spring washer (pos. 16) and fix with Screw (pos. 17). Use faces on Turbine shaft to hold against rotation when tightening screw.
5. Hold Turbine shaft (pos. 7) against 1st stage Worm wheel and tighten Screws (pos. 17) in Horizontal shaft (pos. 29) and Pinion (pos. 11). Check rotation on Turbine shaft.

Maintenance and repair (continued)

Gear Subassembly

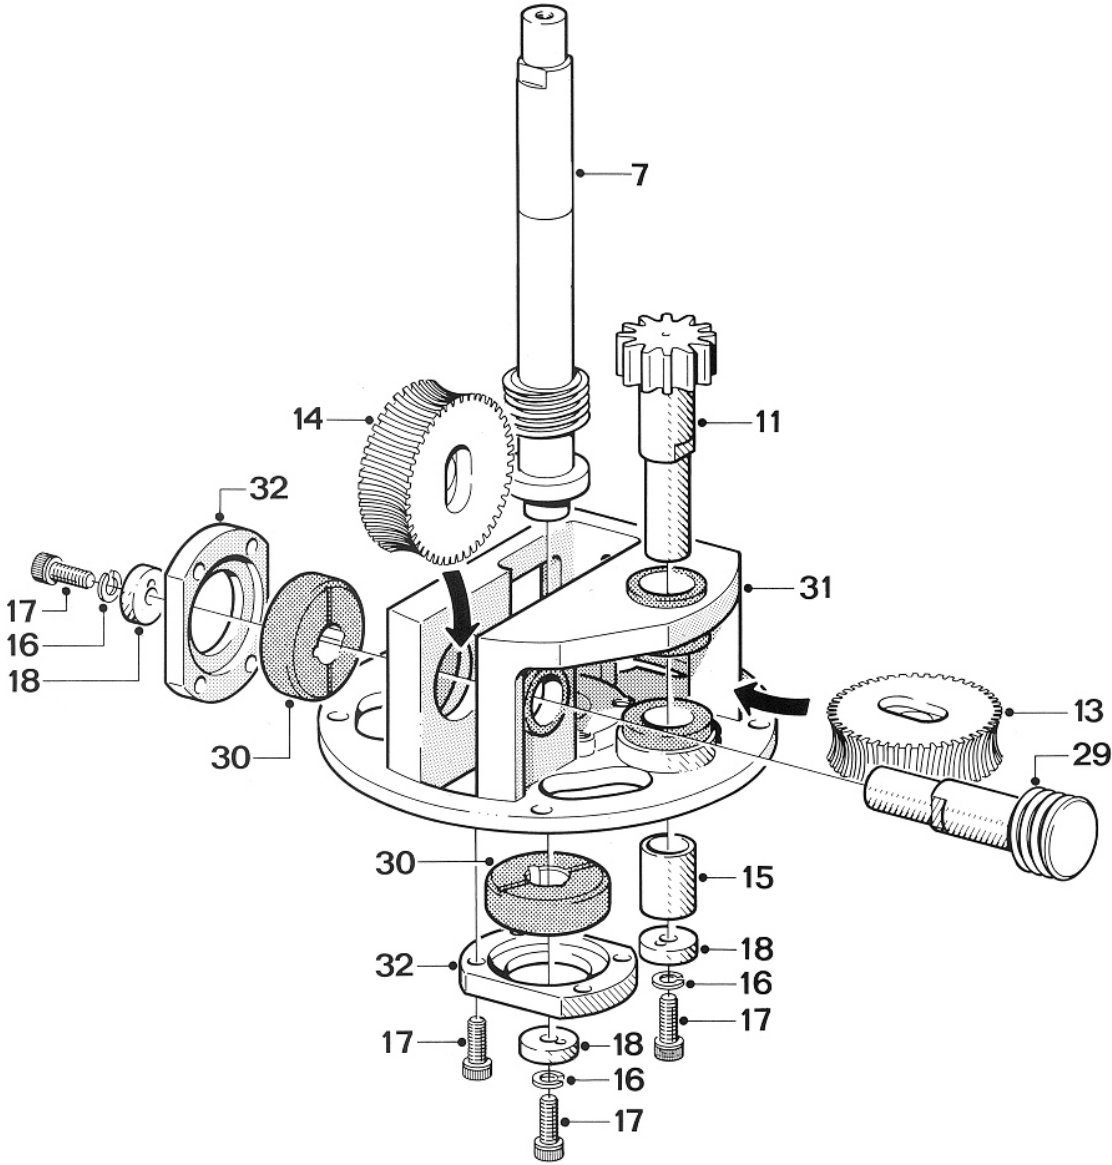

Maintenance and repair (continued)

Replacement of Collar Bushes

1. Place Gear frame (pos. 31) upside down with a firm support under the flange. Use for instance jaws of a vice. Do not clamp on machined surfaces. With Pusher (tool no. TE81B031, see page 28) knock out Collar bush.
2. Turn Gear frame to upright position and hold over support such as flat steel bar clamped in a vice. Knock out Collar bush with Pusher.
3. Turn Gear frame 90° and hold over support. Knock out Collar bush with Pusher.



Warning: To avoid risk of deforming Gear frame, it is utmost important that it is supported while the Collar bushes are being knocked out.




4. Remove all remains of old Araldite etc.. Holes must be perfectly clean before mounting new Collar bushes. Rinse with chemical cleaner.
5. Coat new Collar bushes with CIBA-GEIGY two component Standard blue Araldite and push into Gear frame.
6. To hold Collar bushes in correct position, insert fixtures (tool no. TE81B032, see page 28) and let harden according to instructions.

Maintenance and repair (continued)

Replacement of Collar Bushes

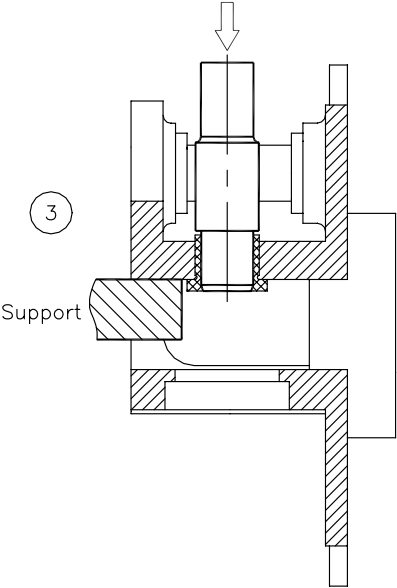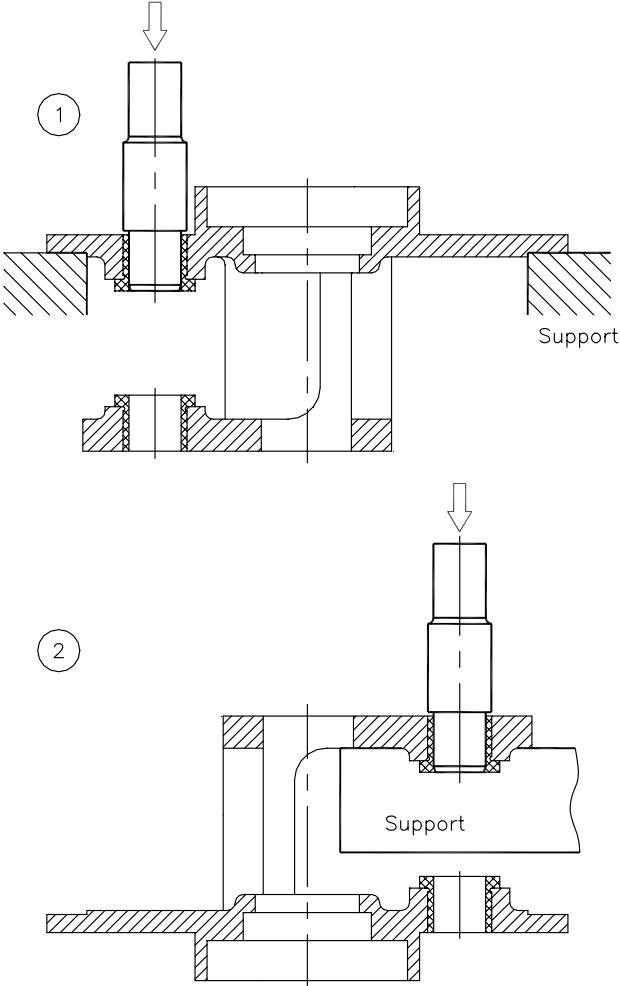

Removal of old Collar bushes

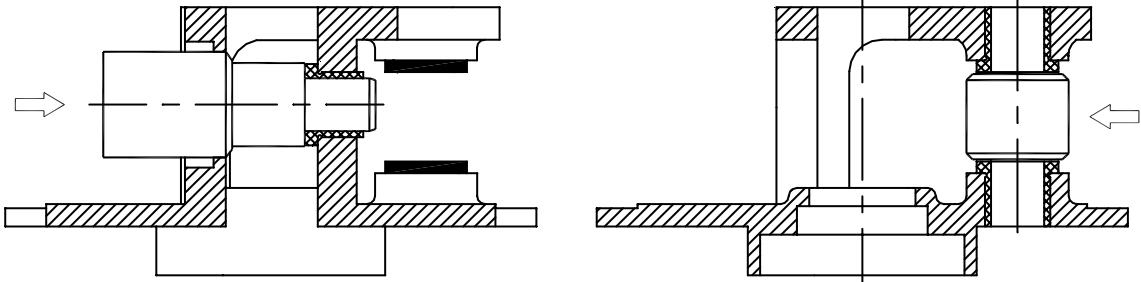

Mounting of new Collar bushes

Maintenance and repair (continued)

Replacement of Ball races

In Body

1. A. With big end downwards knock several times Body with bearings (pos. 28) hard against firm wooden support until Ball race (pos. 28.3) drops out.
1. B. If it is not possible to knock out Ball race in this way, it is necessary first to screw out Main collar lower (pos. 28.2) - see page 26. Carefully push off old Ball race without damaging Main collar lower. Use mandrel and firm support.

Before mounting of new Ball race, main collar lower (pos. 28.2) must be remounted into Body - see page 26.

2. Clean surfaces and place Ball race (pos. 28.3) on Main collar lower (pos. 28.2). Press by hand as long as possible. By means of a tube mandrel or if desired wooden block, carefully hammer Ball race home.

Ball race must not project over endface of Main collar lower. To avoid tilting mandrel must push along the whole circumference of Ball race. Do not damage surface of Ball race.

On Gear wheel




1. Place Gear wheel with ball race (pos. 8) on support. Support only under Ball race (pos. 8.1). With mandrel press off old Ball race.
2. Clean surfaces and press on new Ball race. Ball race must be pressed fully home on Gear. Press parallel. Use press or vice. Do not damage surface of Ball race.

In Hub cover

1. Place Hub cover with Ball race (pos. 21) on support. Carefully knock out old Ball race by means of small mandrel or if desired screwdriver. Knock several times around the circumference to avoid tilting.
2. Clean surfaces and press in new Ball race. Ball race must be pressed fully home. Press parallel. Do not damage surface of Ball race.

Maintenance and repair (continued)

Replacement of Ball races

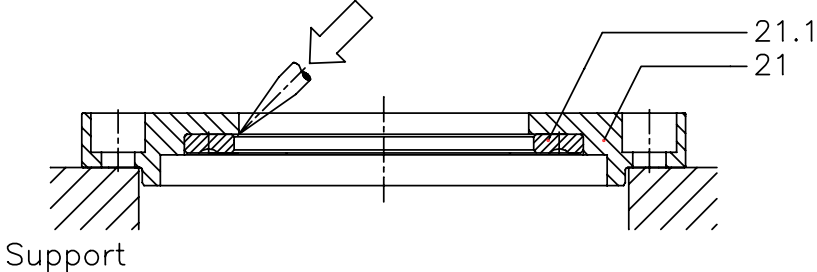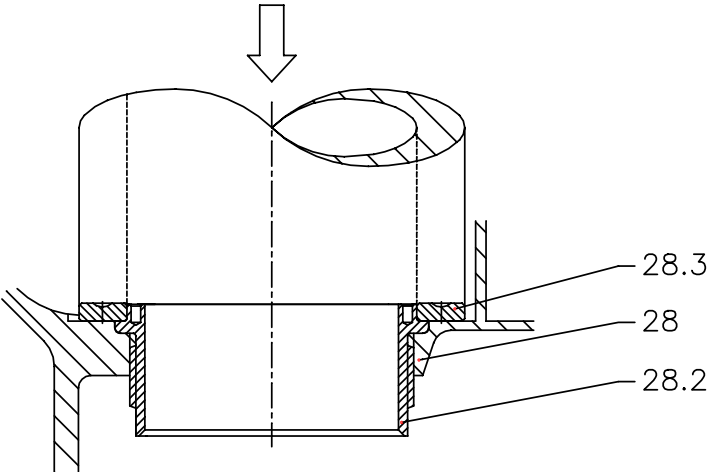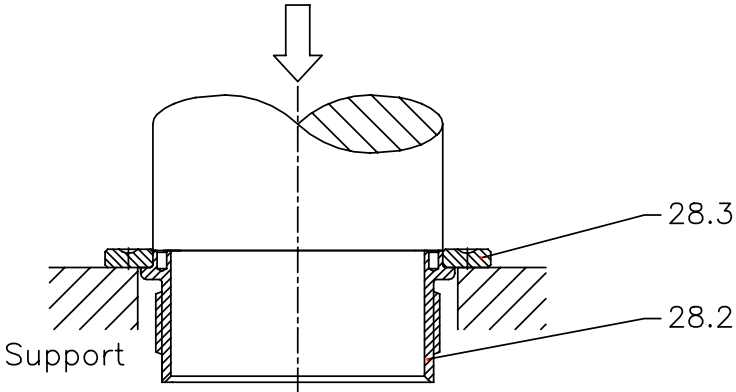

Maintenance and repair (continued)

Replacement of Main Collars

Although normally exposed to very limited wear, it is possible to replace Main collars (pos. 28.1 and 28.2) in Body. The procedure to do this is described below.

Warning: Replacement of Main collars involves risk of damaging the special threads and accordingly the body. It is recommended to let an authorized Alfa Laval Tank Equipment distributor do the replacement.



Main collar Upper

1. Place Body (pos. 28) in a vice in upright position. Do not clamp on machined faces. Insert Tool (see page 29) into Main collar upper (pos. 28.1). To loosen Loctite, knock hard on tool with hammer. Unscrew Main collar.
2. Carefully clean thread and recess in Body. Do not damage special thread in Body. Recess must be absolutely clean and free from remains of old loctite. If desired, use solution of ethylene glycol.
3. Make sure that new Main collar is clean and free from impurities. Apply loctite No. 243 on thread.
4. Screw in new Main collar. Attention should be given to make sure that thread is in correct engagement before screwing in Main collar.
5. Tighten Main collar fully home. Several times knock hard on tool and tighten up.
6. Check that main collar is fully home: Install Stem, Ball retainer with balls and Gear wheel (see page 18). Check that there is sufficient axial clearance to allow for free rotation of Stem.

Main Collar Lower



Place Body in a vice in upside down position, and repeat procedure described above.

Warning: Thread on Main collar lower is left-handed.



Maintenance and repair (continued)

Replacement of Main Collars

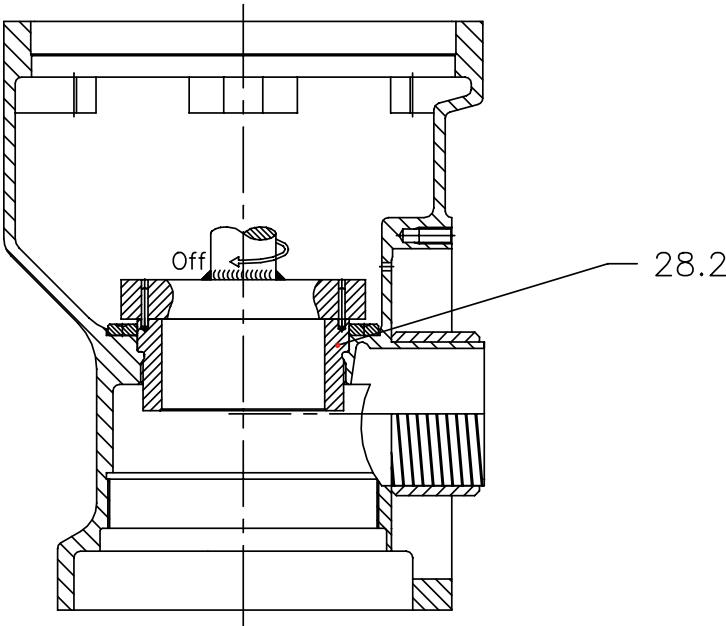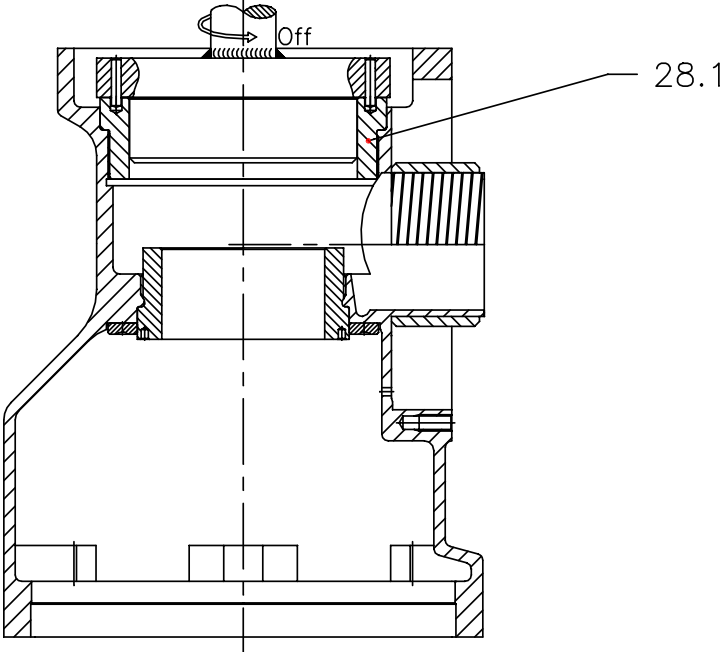

Tools

Standard Tool kit for Gunclean Toftejorg TZ-75, Article No. TE81B065


Tool No.	Description
TE134	Unbraco Key for Screw
TE134A	Unbraco Screwdriver for Screw
TE135	Unbraco Key for Screw
TE135A	Unbraco Screwdriver for Screw
TE369	Caliper, 5mm

Available on request:


TE81B031	Pusher for Gear frame, 2"
TE81B032	Fixture set for Gear frame, 2"

Sketch of Tools for replacement of Collar bush

TE81B031 Pusher:


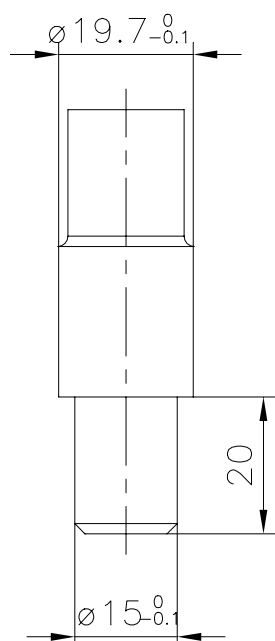


TE81B032 Fixture set:

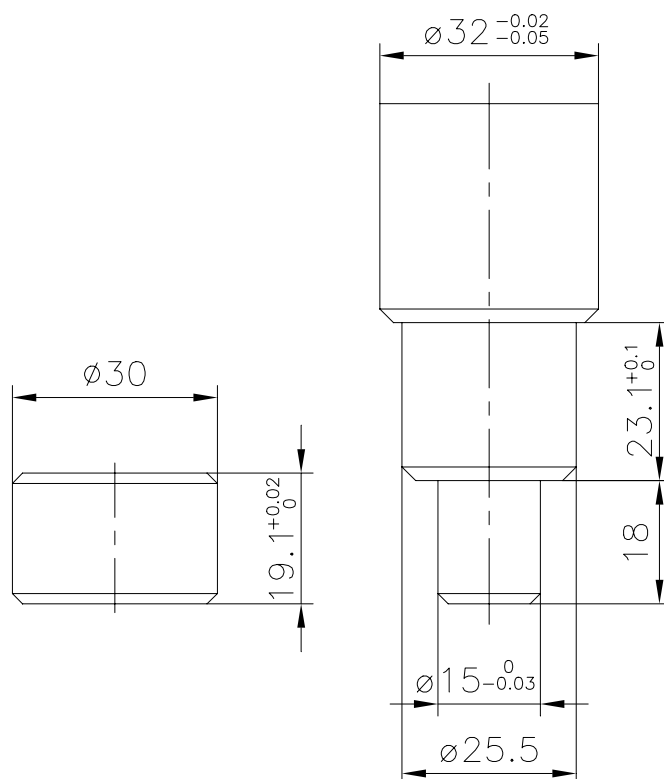

Tools (continued)

Sketch of tool for replacement of Main collars

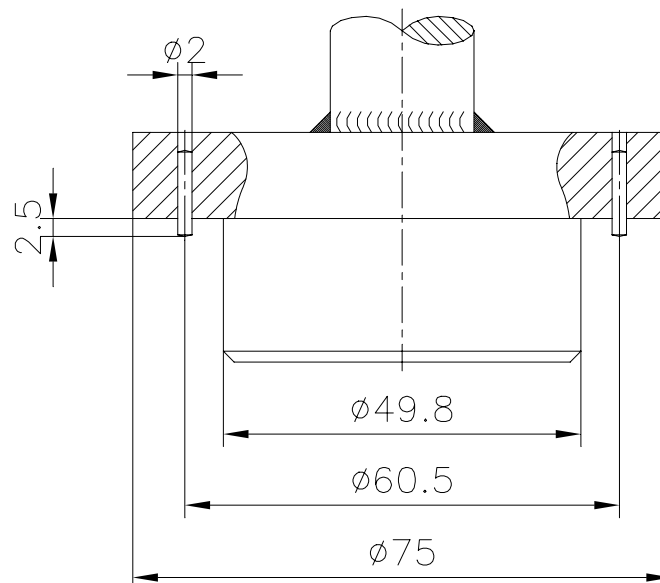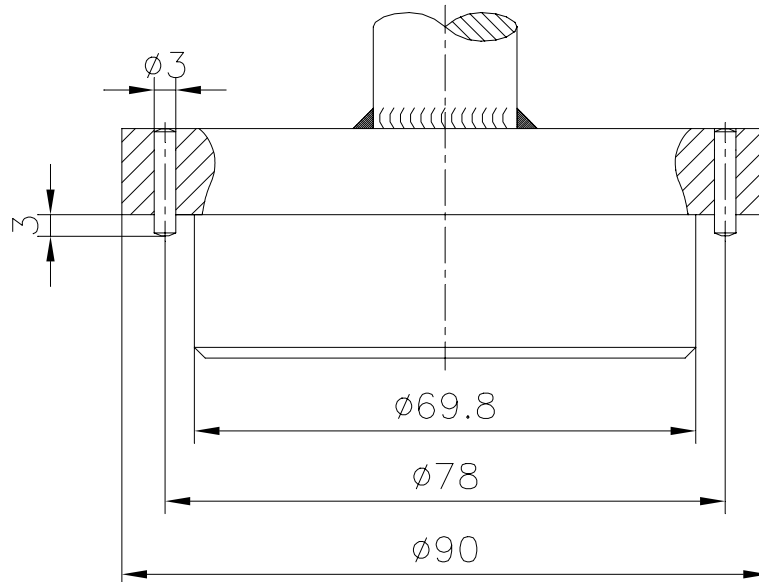

Trouble Shooting Guide

Symptom: Slow rotation or failure of the machine to rotate

Possible causes	Action
No or insufficient liquid flow	<p>a). Check if supply valve is fully open</p> <p>b). Check if inlet pressure to machine is correct</p> <p>c). Check supply line/filler for restrictions/clogging</p> <p>d). Remove nozzles and check for clogging. If blocked, carefully clean nozzle without damaging stream straighteners and nozzle tip.</p> <p>e). Remove Flange/Nipple, Guide and Impeller (see page 12) and check for clogging in Impeller area.</p> <p>If large particles repeatedly get jammed in the machine, install filter or reduce mesh size of installed filter in supply line.</p>
Foreign Material or Material Build-up	<p>Insert hex Screwdriver in screw in top of Turbine shaft and easily turn Turbine shaft clockwise. If any resistance is recognized, disassemble machine to localize the cause.</p>
a). Impeller jammed	Remove Guide and Impeller (see page 12) and remove foreign material.
b). Turbine shaft sluggish in Main Bush	Remove Gear Subassembly (see page 14) and Gland (pos. 5) and clean Main bush.
c). Bevel gears jammed	Remove Flange/Nipple and Hub Subassembly (see page 16). Clean teeth on Stem and Bevel gear.
d). Stem jammed/sluggish	Remove Gear subassembly (see page 14). Check free rotation of Stem. Remove Stem (see page 18). Remove foreign material/material build-up on Stem and inside Main Collars. Clean Ball Races and Ball retainer with balls. Also clean Main bush.

Trouble Shooting Guide (continued)

Symptom: Slow rotation or failure of the machine to rotate

Possible causes	Action
e). Gearbox jammed/sluggish	Remove foreign material from Gearbox. Check rotation of shafts. If restriction is recognized, disassemble gearbox (see page 20) and remove material build up, especially on 2nd stage Worm wheel and mating Collar bushes.
f). Hub jammed/sluggish	Disassemble Hub Subassembly (see page 16). Remove foreign material inside Hub. Clean Ball races and Ball retainer with balls. Also clean nose of Body.

Wear

a). Slide bearings	See page 10 - 11.
b). Main bush	See page 10 - 11.
c). Worm wheels	See page 10 - 11.
d). Collar bushes	See page 10 - 11.
e). Turbine shaft	Check clearance in Main bush and in Slide bearing. Transverse movement should not exceed 0,5 mm. Also inspect worm wheel for wear.
f). Horizontal shaft	Check clearance in Collar bushes. Transverse movement should not exceed 0,5 mm. Also inspect worm for wear.

Mechanical defects

a). Worm wheel/Teeth broken	Replace Worm wheel.
b). Worm wheel can rotate on Horizontal shaft/Pinion due to damaged driver faces.	Replace Worm wheel.
c). Damaged teeth on Bevel Gear	Inspect teeth on Stem and Bevel gear for deformation. Mount Hub and Stem in Body (see page 16 and 18). Hold Body in upside down position and rotate Hub to check that Bevel gears can work together. If damaged: Replace Stem and/or Bevel gear.


Reference List of Parts

Pos.	Ref. No.	No/ Unit	Description	Material	Remarks
1	<input type="checkbox"/> TE22B500	1	Nipple 2" BSP	Stainless steel	Spare part
	<input type="checkbox"/> TE22B501	1	Nipple 2" NPT	Stainless steel	Spare part
	<input type="checkbox"/> TE22B502	1	Nipple 2 ½" ASA-B26	Stainless steel	Spare part
2	<input type="checkbox"/> TE603	1	Guide 100%	Stainless steel	Spare part
	<input type="checkbox"/> TE103-0	1	Guide ring 0%	Stainless steel	Spare part
3	TE604Z	1	Stem	Stainless steel/Polymer	Spare part
3.1	TEB604-2 ⁾		Bottom liner	Polymer	Wear part
3.2	TE904-1 ⁾		Top liner	Polymer	-
4	TE605	1	Impeller 100%	Stainless steel	Spare part
5	TE608Z	1	Gland	Stainless steel	Spare part
6	TE609P	1	Main bush	Polymer	Wear part
7	TE911K	1	Turbine shaft	Stainless steel	Wear part
8	TE512-13	1	Gear wheel w. Ball race	Stainless steel	Spare part
8.1	TE126-1		Ball race	Stainless steel	Wear part
10	TE120	6	Screw	Stainless steel	Spare part
11	TE114	1	Pinion	Stainless steel	Spare part
12	TE615K	3	Collar bush	Carbon	Wear part
13	TE22A360	1	Worm wheel w. reinforcem.	Polymer/Stainless steel	Wear part
14	<input type="checkbox"/> TE22A360	1	Worm wheel w. reinforcem.	Polymer/Stainless steel	Wear part
	<input type="checkbox"/> TE22A564	1	Worm wheel, e-gear	Stainless steel	Wear part
15	TE117	1	Journal	Stainless steel	Spare part
16	TE156	21	Spring washer	Stainless steel	Spare part
17	TE118	29	Screw	Stainless steel	Spare part
18	TE619A	4	Washer	Stainless steel	Spare part
19	<input type="checkbox"/> TE101A	1	Handle 2½" ASA-B26	Bronze	Spare part
	<input type="checkbox"/> TE101G	1	Handle 2" BSP	Bronze	Spare part
20	TE622S	1	Bevel gear w. ball race	Stainless steel	Spare part
20.1	TE126-1		Ball race	Stainless steel	Wear part
21	TE22B340	1	Hub cover w. ball race	Stainless steel	Spare part
21.1	TE126-1		Ball race	Stainless steel	Wear part
22	<input type="checkbox"/> TE50C011	2	Nozzle, ø 11 mm	Stainless steel	Spare part
	<input type="checkbox"/> TE50C012	2	Nozzle, ø 12 mm	Stainless steel	Spare part
	<input type="checkbox"/> TE50C013	2	Nozzle, ø 13 mm	Stainless steel	Spare part
	<input type="checkbox"/> TE50C014	2	Nozzle, ø 14 mm	Stainless steel	Spare part
	<input type="checkbox"/> TE50C015	2	Nozzle, ø 15 mm	Stainless steel	Spare part
23	TE624-OKZ	1	Hub conical part	Stainless steel/Polymer	Spare part
23.1	TE624-11 ⁾		Hub liner	Polymer	Wear part
24	TE448	1	Cotter pin	Stainless steel	Spare part
25	TE624-2-15	1	Hub nozzle part	Stainless steel	Spare part
27	TE126S	2	Ball retainer w. balls	Polymer/Stainless steel	Wear part
28	TE627Z	1	Body with bearings	Stainless steel	Not available
28.1	TE127Z1		Main collar upper	Stainless steel	Wear part
28.2	TE127Z2		Main collar lower	Stainless steel	Wear part
28.3	TE126-1		Ball race	Stainless steel	Wear part
28.4	TE127-3		Hub collar	Stainless steel	Wear part
29	<input type="checkbox"/> TE128Z	1	Horizontal shaft	Stainless steel	Wear part
	<input type="checkbox"/> TE128E	1	Horizontal shaft, e-gear	Stainless steel	Wear part
30	TE929K	2	Slide bearing	Carbon	Wear part
31	TE630	1	Gear frame	Stainless steel	Spare part
32	TE531	2	Bearing cover	Stainless steel	Spare part
33	TE633-5	1	Bottom cover	Stainless steel	Spare part
34	<input type="checkbox"/> TE50C101	2	Nozzle extension	Stainless steel	Spare part

Configuration as delivered marked

⁾ See remarks page 16 and 18.

Cross Sectional Drawing

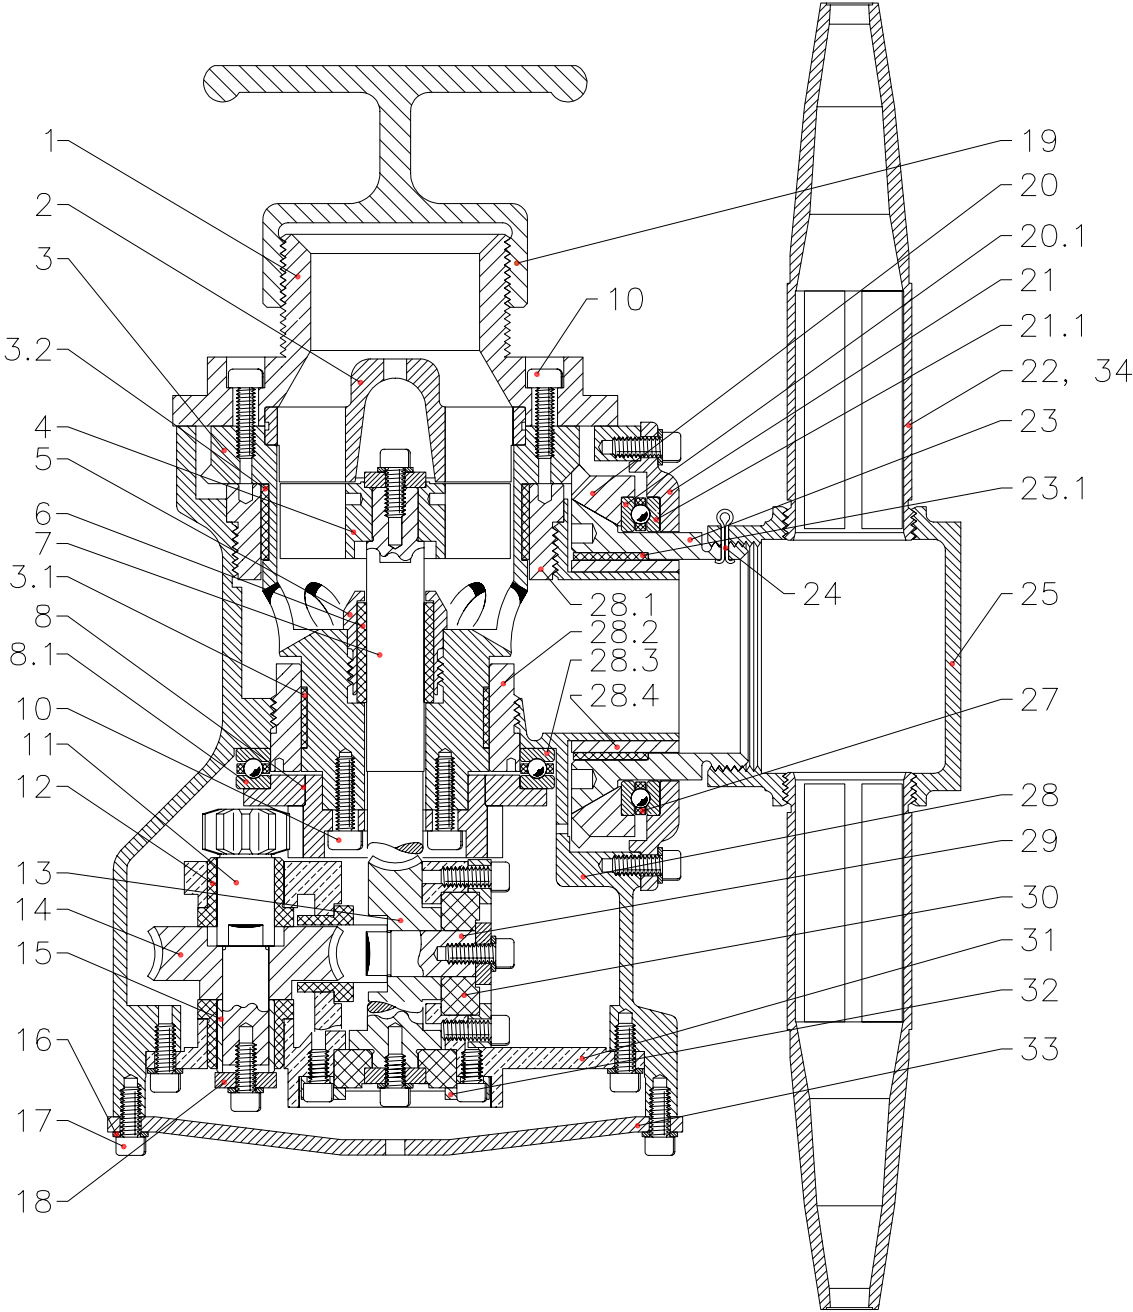

Service Kits

TE55M000 Minor Service Kit TZ-75FIX/TZ-75PT/TZ-750FIX

Pos	Part number	No./kit	Description
6	TE609P	1	Main bush
12	TE615K	3	Collar bush
13	TE22A360	1	Worm wheel
14	TE22A360	1	Worm wheel
19	TE651	3	Locking wire
30	TE929K	2	Slide bearing

TE55M010 Major Service Kit TZ-75FIX/TZ-75PT/TZ-750FIX

Pos	Part number	No./kit	Description
7	TE911K	1	Turbine shaft
8.1	TE126-1	1	Ball race
20.1	TE126-1	1	Ball race
21.1	TE126-1	1	Ball race
28.3	TE126-1	1	Ball race
23.1	TE624-11	1	Hub liner
24	TE448	1	Cotter pin
27	TE126S	2	Ball retainer with balls
28.1	TE127Z1	1	Main collar, upper
28.2	TE127Z2	1	Main collar, lower
28.4	TE127-3	1	Collar, hub
29	TE128Z	1	Horizontal shaft
-	TE55M000	1	Service Kit Minor, TZ-75FIX/ TZ-75PT/TZ-750FIX

How to order spare parts and claim procedure

How to Order Spare Parts

On the Cross Sectional Drawing as well as on all instruction drawings, the individual parts have a position number, which is the same on all drawings. From the position number the part is easily identified in the Reference List of Parts, page 32.

Individual parts should always be ordered from the Reference List of Parts, page 32. Ref. number and Description should be clearly stated.

Please also quote the type of machine and serial number. This will help us to help you. The type and serial numbers are stamped on the body of the tank cleaning machine.

Claim Procedure

In case of failure that needs assistance from Alfa Laval Tank Equipment A/S, it is essential for our evaluation that the problem, as well as the working conditions of the machine are described as detailed as possible.

For description of the working conditions, fill in copy of Claim Report - Working Conditions, which you will find at the back of this manual.

How to contact Alfa Laval Tank Equipment A/S

For further information please feel free to contact:

Alfa Laval Tank Equipment A/S
Baldershoej 19
P.O. Box 1149
2635 Ishoej
Denmark

Phone no.: +45 43 55 86 00
Fax no.: +45 43 55 86 01
www.alfalaval.com
www.toftejorg.com

Contact details for all countries are continually updated on our websites.

Claim Report Working Conditions

Page 1/2

Ref. Claim Case : _____

Machine/Cleaner Type : _____ **Serial No.:** _____

Configuration

- Nozzles : _____ x \varnothing _____ mm

- Turbine/Inlet Guide : _____ %

Working Conditions

Inlet pressure at machine/cleaner : _____

Type of Valve in inlet line : _____

Can hydraulic shock be disregarded: : Yes No

Inlet line flushed before installation of tank cleaner? : Yes No

Working hours before failure : _____ hours

Cleaning Programme

Cleaning media and conc.	Temperature	Time	Recirculation?

Is sterilising being used? : Yes No

Procedure (media/temp.)? : _____

Is steam injection being used for heating? : Yes No

Time: _____

Temperature: _____

V. 98.1

Claim Report Working Conditions (continued)

Page 2/2

Condition of Cleaning Media

- Clean
- Contaminated with (nature and description)
- Chemicals/Solvents _____
- Soluble
- Low viscous
- Hard particles/size _____
- Soft particles/size _____
- High viscous
- Sticky/tenacious
- Solidifying
- Crystallizing

Has filter been installed in inlet line?

- Yes
- Mesh size: _____ mm
- No

Is tank cleaner flushed with clean water after tank cleaning?

- Yes
- No

Type of Soilage/Tank Contents to be removed

Name, formula/concentration of material to be removed from tank : _____

What is material soluble in : _____

Nature of material:

- Volatile/explosive
- Low viscous
- High viscous
- Sticky/tenacious
- Solidifying
- Crystallizing
- Contains soft particles
- Contains hard particles/fibres

Is tank cleaner submerged in material?

- Yes
- No

Other information/Remarks

Date: _____

Sign.: _____